



J2534 VCI Driver Installation Guide


The J2534 driver must be downloaded to your PC to allow communications with the VCI. 32-bit PCs and 64-bit PCs are supported, but not ARM-based PCs

NOTE:


- The version of the driver must correspond to the **Release Version** of your VCI found on your scan tool **Software Information** screen.
- In order to complete a successful programming event, you must follow the requirements on the OEM J2534 website.
- For information on OEM Reprogramming Web Sites and PC requirements, go to NASTF.ORG/.

VCI Driver Installation Procedure


1. Execute the downloaded file.
2. Windows will ask for permission to run as Administrator. Please verify that the publisher announced is a trusted entity and then select **YES**.
3. In the resulting "InstallShield Wizard" window, click **Next**.

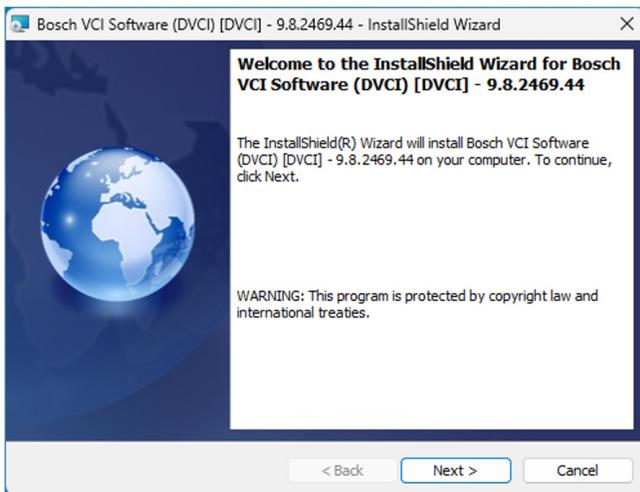


4. In the screen showing "Destination Folder," click **Next**.

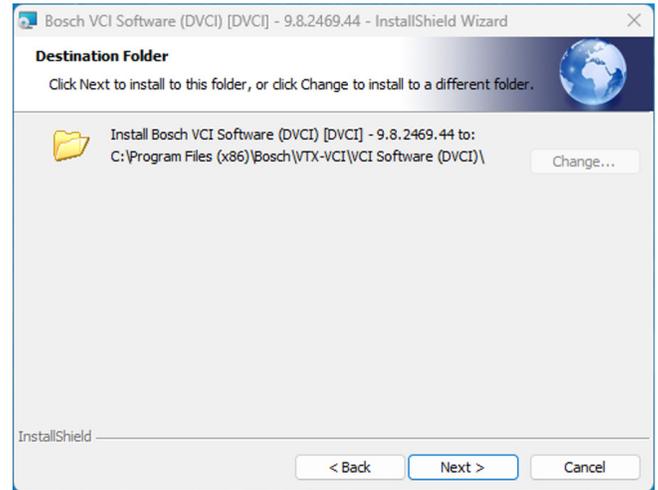

5. In the screen showing "Ready to Install the Program", click **Install**.

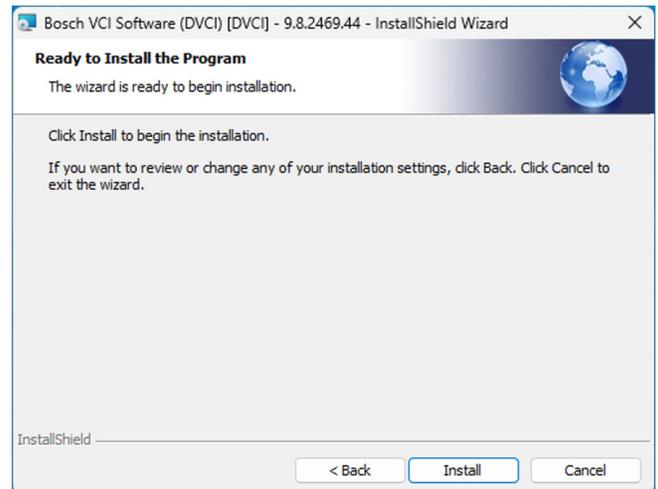

6. Please wait while the installation is in progress.

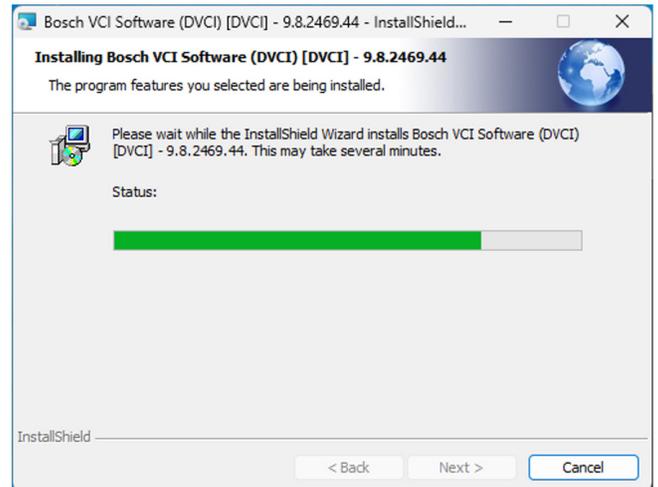



7. When "InstallShield Wizard Completed" is displayed then click **Finish**.



8. The installation is successfully completed.

Mac Tools® Technical Support: 800.MACTOOLS

Please record and retain this important information: